

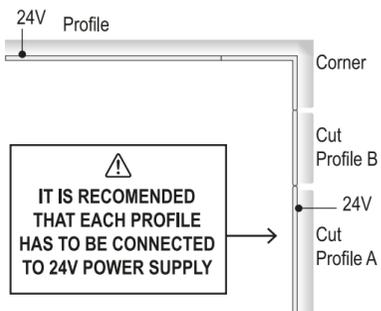
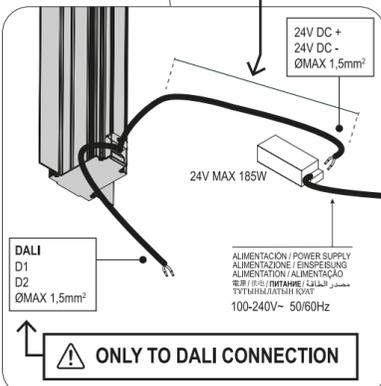



WARNING:
INSTALL THE DRIVER BEFORE THE
PLASTERBOARD

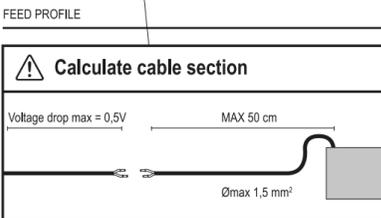


ELECTRICAL INTERCONNECTION

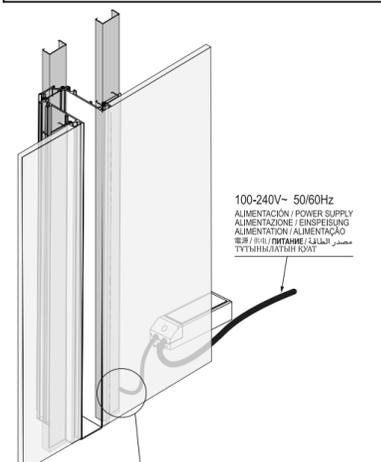


Connection between profiles

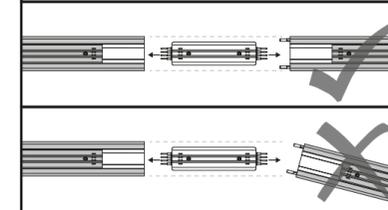


NONE CUT PROFILE

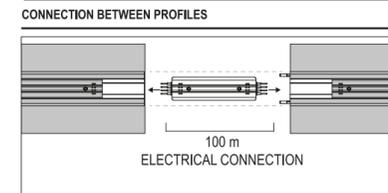


FINAL PROFILE

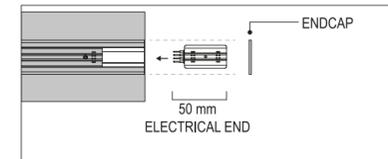


CUT PROFILE

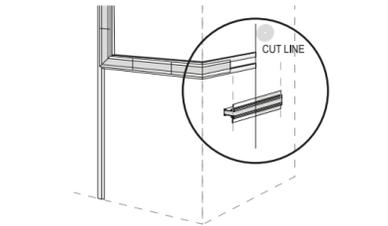


CUT PROFILE

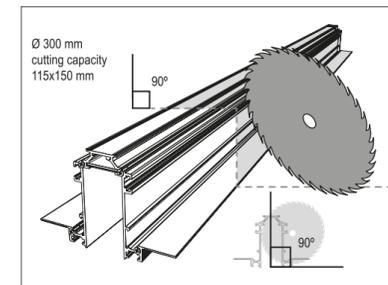


CONNECTION TO FEED OR INTERMEDIATE PROFILE

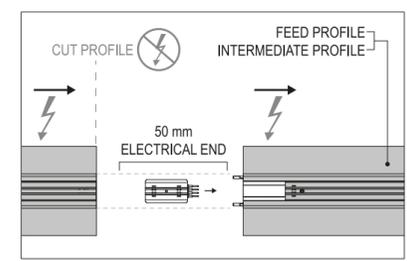






CONNECTION TO FEED PROFILE

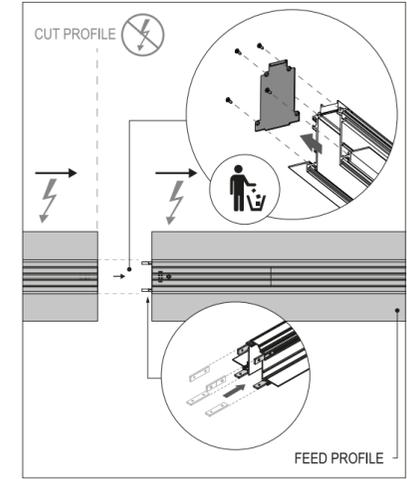






ASSEMBLING JOINING

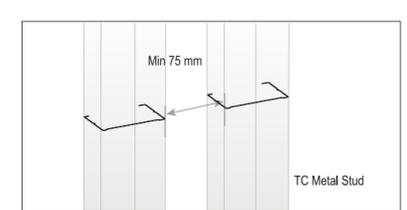

RECOMEND FEED PROFILE CONNECTION

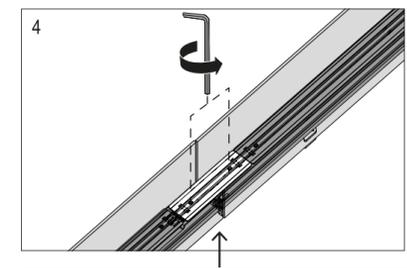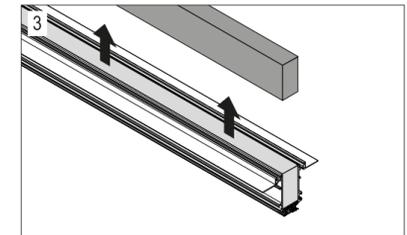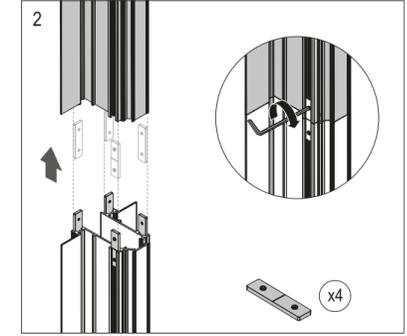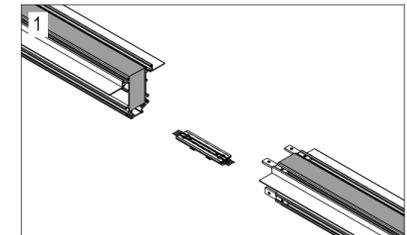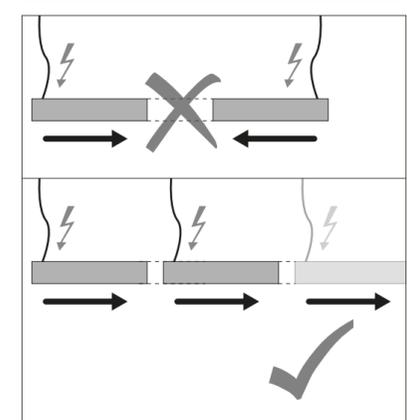

WARNING
Adjustment electrical parts only if it is necessary

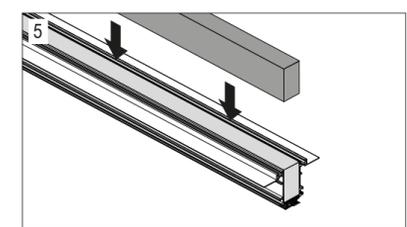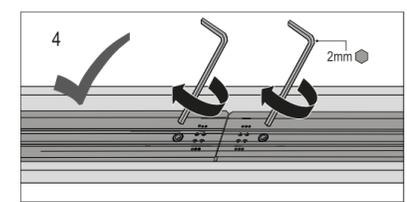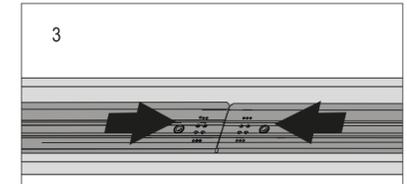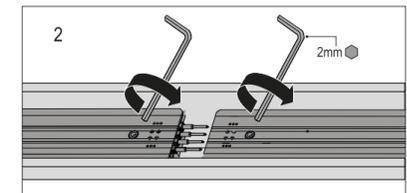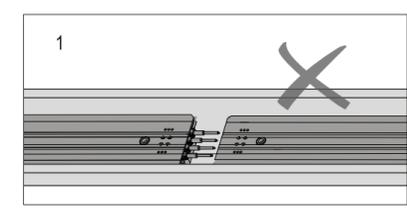

PLASTERBOARD

