


- Enciende luces
- Apaga las luces
- Aumenta luminosidad
- Disminuye luminosidad
- Aumenta la temperatura color
- Disminuye la temperatura de color
- 6500K (máxima luz blanca)
- Modo nocturno (pulsar 3 segundos para encender o apagar la pequeña luz indicadora).
- Temporizador
 - *Presionar brevemente, (parpadea la luz una vez) La luz se mantendrá encendida 15 minutos.
 - *Presionar brevemente, (Parpadea 2 veces). La luz se mantendrá encendida 30 minutos.
 - *Presionar brevemente, (Parpadeo 3 veces) la función temporizador se cancela.
- Enciende foco A. 4000K.
- Enciende foco B. 4000K.
- Enciende ambos focos A y B. 4000K.

NOTA.


Si el control remoto no funciona, hay que volver a sincronizarlo con el pie de salón. Desconéctelo y vuelva a conectarlo, en 30 segundos presione durante 10 segundos el botón . Cuando parpadee la luz el mando se habrá emparejado con éxito.

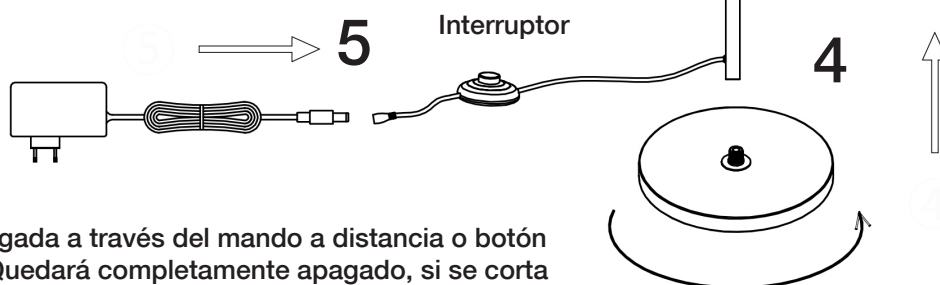

La luz del pie de salón apagada a través del mando a distancia o botón táctil queda en stand-by. Quedará completamente apagado, si se corta la corriente a través del interruptor de pie.

Para ver la ficha técnica de producto completa, puede usar el siguiente código QR:




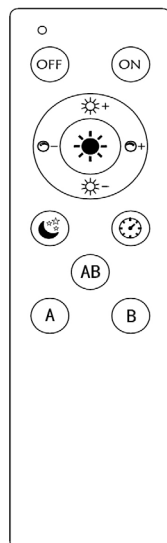

- ON/OFF**
- Night mode (3 seconds)**
- Increases brightness**
- Decrease brightness**
- Increases colour temperature**
- Decreases colour temperature**
- 6000K (maximum white light)**
- Leisure mode 3000K**
- Timer**
 - *Press briefly, (light flashes once) The light will stay on for 15 minutes.
 - *Press briefly, (Flashes 2 times). The light will stay on for 30 minutes.
 - *Press briefly, (Flashing 3 times) the timer function is cancelled.
- Readout mode. 3000K**
- Working mode 6500K. 50% brightness**
- Play mode 4000K. 50% brightness**

NOTE.

If the remote control does not work, the remote control must be re-synchronised with the floor lamp. Disconnect and reconnect it, within 30 seconds press and hold the button for 10 seconds. When the light flashes the remote will be paired successfully.

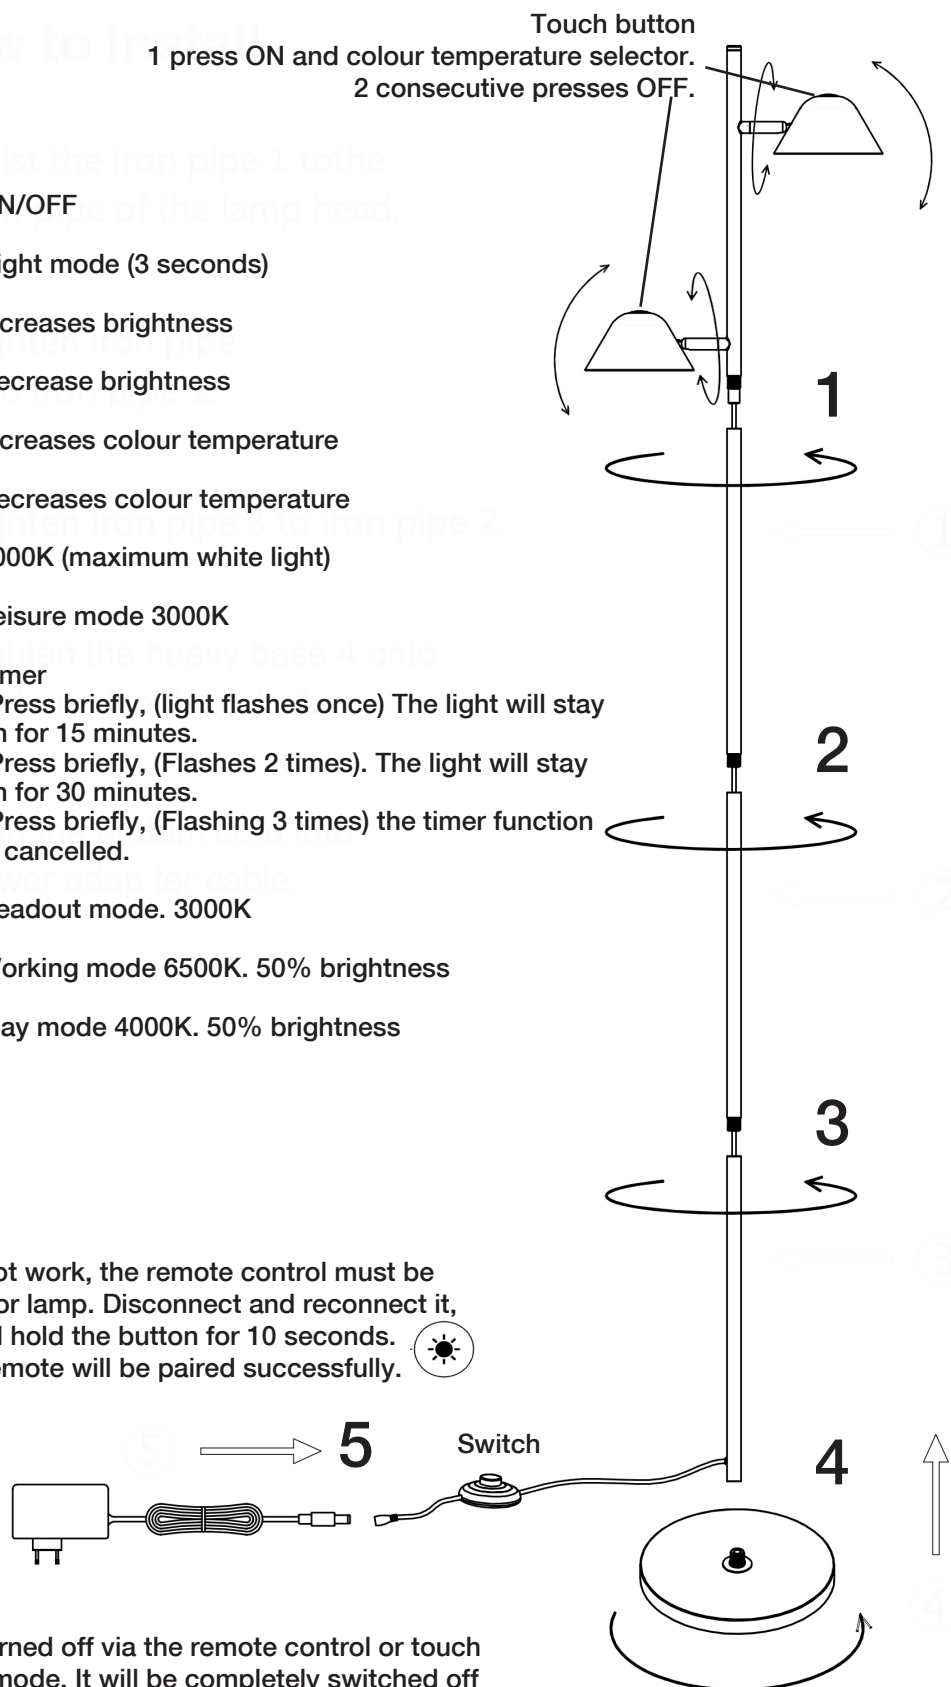

The light of the floor lamp turned off via the remote control or touch button remains in stand-by mode. It will be completely switched off if the power is switched off via the foot switch.

You may use the following QR code to view the complete technical data sheet of the product:

